

## Typical sealed Unit replacement

- 1. Working from the exterior remove the glazing bead around the sealed unit using a long blade utility knife to cut the silicone,
- 2. Using an exterior grade silicone place a 1/8" bead of silicone around the interior glazing of opening.
- 3. Install the new glazing beads using 1 or 1 ½" brads or finishing nails. The glazing may have to be trimmed.
- 4. Fill any holes from the brads or nails with wood filler and touch up with paint or stain.

