French Outswing Casement Elevations

D.L.O.	13-11/16"	17-5/8"	21-9/16"	25-1/2"	29-7/16"
GLASS	14-5/8"	18-9/16"	22-1/2"	26-7/16"	30-3/8"
M.O.	23"	26-15/16"	30-7/8"	34-13/16"	38-3/4"
R.S.O.	20-11/16"	24-5/8"	28-9/16"	32-1/2"	36-7/16"
BOX	19-11/16"	23-5/8"	27-9/16"	31-1/2"	35-7/16"

15-7/8"	16-13/16"	26-15/16"	24-7/8"	23-5/8"
23-3/4"	24-11/16"	34-13/16"	32-3/4"	31-1/2"
27-11/16"	28-5/8"	38-3/4"	36-3/4"	35-7/16"
31-5/8"	32-9/16"	42-11/16"	40-5/8"	39-3/8"
39-1/2"	40-7/16"	50-9/16"	48-1/2"	47-1/4"

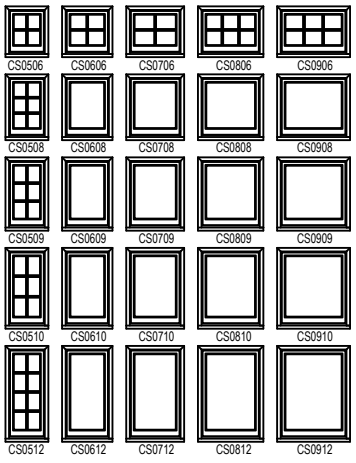

D.L.O.	13-11/16"	17-5/8"	21-9/16"	25-1/2"	29-7/16"
GLASS	14-5/8"	18-9/16"	22-1/2"	26-7/16"	30-3/8"
M.O.	23"	26-15/16"	30-7/8"	34-13/16"	38-3/4"
R.S.O.	20-11/16"	24-5/8"	28-9/16"	32-1/2"	36-7/16"
BOX	19-11/16"	23-5/8"	27-9/16"	31-1/2"	35-7/16"

47-3/8"	48-5/16"	58-7/16"	56-3/8"	55-1/8"
51-5/16"	52-1/4"	62-3/8"	60-3/8"	59-1/16"
55-1/4"	56-3/16"	66-5/16"	64-1/4"	63"
63-3/16"	64-1/16"	74-3/16"	72-1/8"	70-7/8"

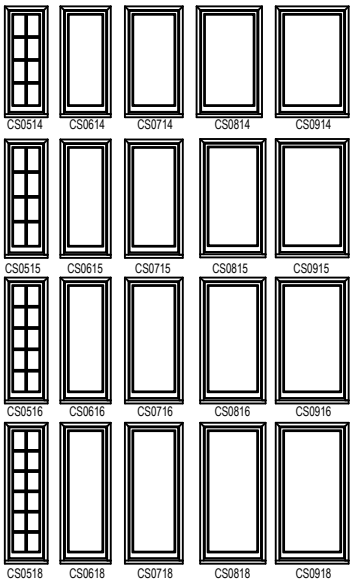

Notes:

Norwood Casement windows are available as a fixed, left or right venting operator as viewed from the exterior.

R.S.O. for additional combinations equals the sum of the unit size widths plus 1" and the sum of the unit heights plus 1 1/4".

M.O. for additional combinations is the brick mold width or height plus 1/2".

R.S.O. for stacked combinations mulled two or more wide and over 84" in width or height, it is recommended to add 11/16" filler for each stacked layer in height.

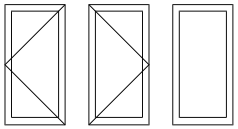

LEFT VENT RIGHT VENT FIXED

NORWOOD
WINDOWS & DOORS